



# INSTRUCTION MANUAL

- Before installing the lighting fixtures, please read this instruction manual carefully.
- The lighting fixtures should be installed, connected and tested by a certified installer based on the local regulations.
- Lamps should always be installed or replaced with care.
- Don't use over rated power lamp.
- Relamping only can be done when the power is off and the lamp is completely cooled down.
- When a lamp is to be cleaned, switch off the fixture and let it cool down completely. Clean the fixture with a soft cloth and a standard PH neutral detergent. Stainless steel finishing should be maintained regularly.
- Misuse of, or changes to the fixture shall nullify the warranty.
- This recessed luminaire shall under no circumstance be covered with insulating matting or similar material.
- This luminaire is IP20, indoor use only.
- Warning — Risk Of Overheating Or Fire If The Clearance Distances Are Compromised
- The Luminaire Light Source Is Not Replaceable. The Whole Luminaire Will Be Replaced By Authorised Agent At End Of Its Life.

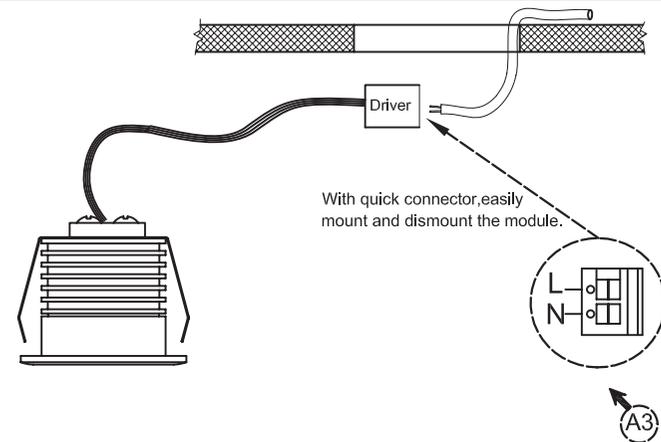


Trade Name	Model Number	Description	Rating	LED Driver (AS/NZS approved)
FERVOUR	350303-ND-RF	3W small downlight 3k fixed White/Black Frame-Non Dimmable	4VDC max, 3W, CCT:3000K	EBP003C0700SS / LF-GIR003YS0700H
FERVOUR	350304-ND-RF	3W small downlight 4k fixed White/Black Frame-Non Dimmable	4VDC max, 3W, CCT:4000K	EBP003C0700SS / LF-GIR003YS0700H

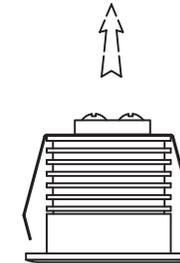


## RISK OF FIRE — REQUIRED CLEARANCE FROM STRUCTURAL MEMBERS AND BUILDING ELEMENTS

HCB= 50 mm MIC=0mm SCB=50 mm SCI= 20mm.

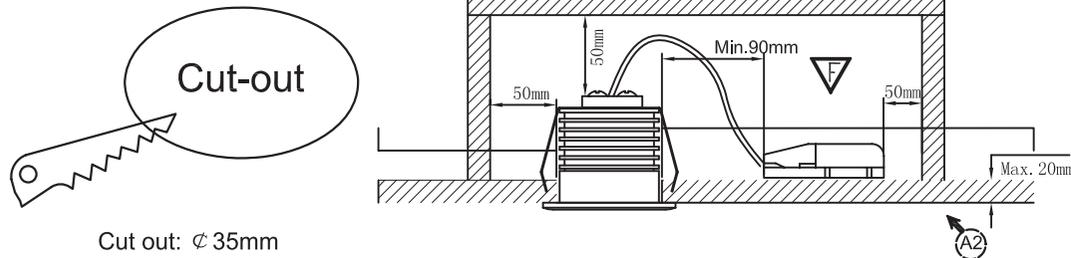

# FERVOUR

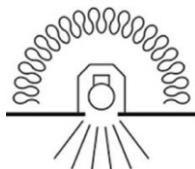

### Installation :

- A1— Please read the data in the graph before using.
- A2— Please pay attention to installing method and the spacing between parts, making appropriate holes according to the luminaire specifications.
- A3— Connect with power after power-off.
- A4— Put the fixture into the ceiling according to the sketches.
- A5— Finish lamp installation.

